


1.Parts Name: As Picture

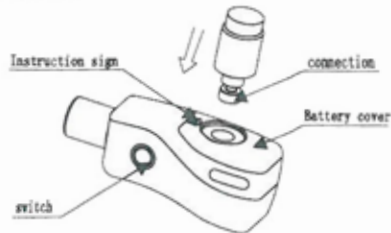

2. How to use:


- 1). When the lock is locked, there will be a sound "Di Di" from the lock automatically, if there is no sound, please change the battery according to the step 3.
- 2). You can choose the lock's state after locking:
 - A: If there is no need to start the alarming system. It is Ok for you just to lock it.
 - B: If you need the alarming system:
 - a). After locking, press the switch, you will hear a sound of "DI", it shows the alarming system is working.
 - b). After starting the alarming system, any shock to the lock, there will be a sound "Di" After 7 seconds, there will be another sound "Di". Then the lock is in a state of alarm. If any shock to the lock, it will cause sharply alarming, > 96db. And the sound will last 15 seconds.
 - c). If shock the lock unintentionally, there will be a sound "DI". But if without shock the lock again within 30 seconds, the alarming system will return to b) state. (This function avoids any accidentally shock..)
- 3.) Open the lock and the alarming system will be stopped.

3. How to change the battery


1. Press the instruction sign and pull out the battery cover.



2. Rotate the bolt out and pull out the cover. Then pick up the batteries.

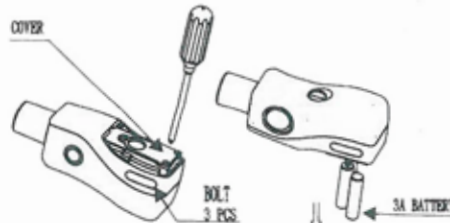

3. Install the battery according to the "+ - " pole and rotate the bolt tightly.
Attention: You should rotate the bolt tightly in order to prevent the water from flowing to the lockbody to damage the alarming system.

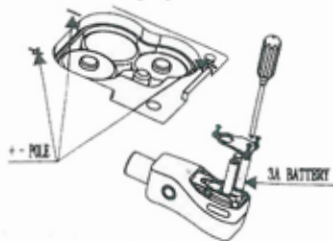

4. Press the battery cover as the drawing shows and move ahead the battery cover.



5. Examine: After the lock is locked, if there is a sound "DI", it shows you correctly installed the battery. If without the sound "DI", please reinstall the battery according to the 4 steps.

