




MOTORCYCLE ALARMED DISC-LOCK BATTERY REPLACEMENT



1 Turn off alarm by unlocking disc-lock. Remove single screw as shown and lift off lock cover to expose battery case.

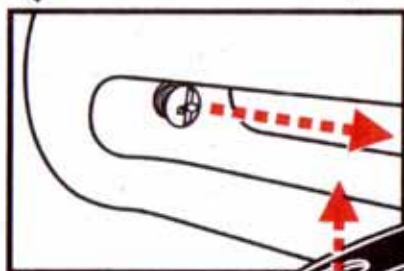


2 Remove battery case cover as shown.

OK



3 Replace batteries with 4-AG13 button batteries.

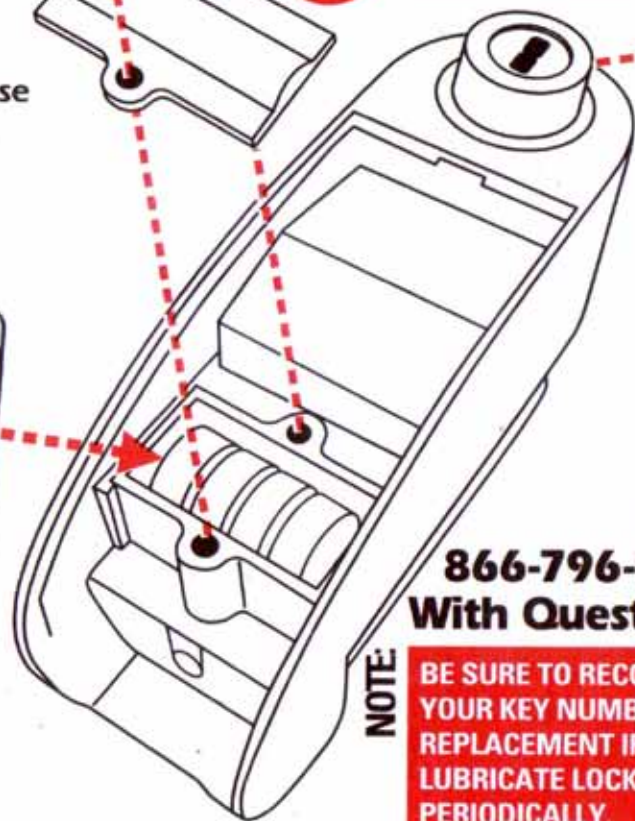

NOTE

BE SURE TO RECORD YOUR KEY NUMBER FOR REPLACEMENT IF LOST. LUBRICATE LOCK PERIODICALLY.

Call: **866-796-8500**
With Questions.

MODEL # **TAL88 & TAL88YL**

TRIMAX™ IS A DIVISION OF: **WYERS™**
Products Group, Inc.

P.O. Box 4161 • Englewood, CO 80155-4161
See our complete line: www.trimaxlocks.com