CAUTION! CAUTION! CAUTION! CAUTION!









Grease Reservoir

Ball(s) should be installed and torqued to 250 foot pounds.

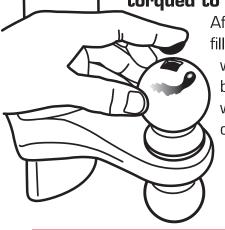

After installation. fill 1/2" drive sockets with a quality bearing grease, which can be dipped out and used to grease ball surface during towing.

Added Rise/Tow Ball Choice

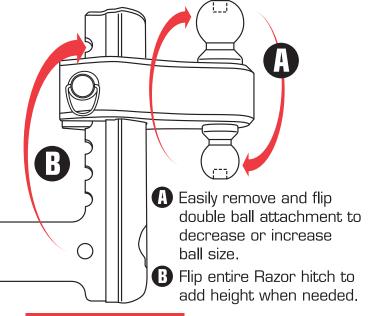

CAUTION!!!

Never overload your RAZOR Adjustable Towing System. Weight tested to 20,000 Lbs. **NEVER EXCEED WT LIMIT OF**

YOUR TOW BALL. Always use standard towing procedures and follow supplied check list.

IMPORTANT CHECK LIST, **Before You Drive**

Make sure your vehicle and trailer maintenance are up to date before you drive. Review this easy to use check list to help ensure a safe trip every time.

- □ Properly secure safety chains and adjust hitch, coupler, draw bar and other equipment that connect the trailer and tow vehicle.
- ☐ Tow ball/lug nuts/bolts on tow trailer and vehicle should be tightened to correct torque and checked every 100 miles.
- ☐ Check brakes on tow vehicle and trailer. These should be in good working order.
- ☐ Check tire pressure on tow trailer and vehicle before use. Correct if needed.
- ☐ Is wiring properly connected? Wiring should not touch the road but be lose enough to make turns without causing damage or plug to come disconnected.
- ☐ Are all running lights, brake lights, turn signals, and hazard lights in good working order?
- ☐ All items on and in trailer should be securely fastened.
- ☐ Trailer jack, tongue support, and any attached stabilizers should be raised and locked in place.
- Review load distribution. Make sure the tow vehicle and trailer load is properly distributed side to side and front to back.
- All mirrors should be set for good visibility.
- Review routes and restrictions on bridges and tunnels.
- ☐ Include wheel chocks and jack stands. **TRIMAX** Chock Locks #TCL65/75 are ideal for this application.



DO NOT USE/OPERATE RAZOR HITCH WITHOUT CORRECTLY AND SECURELY FASTENING PIN AND CLIP!

