

# TBL610 Instructions



# OUTBOARD MOTOR LOCK

## Quickly Secures Outboard Motor Clamps For Added Security

### ■ Simple To Install

1. Twist clamps as close to horizontal as possible. Position top half of lock on top of the motor clamps.
2. Push bottom half of lock up to secure. Squeeze top and bottom together for a secure fit.

**NOTE:** Always place the Keyed half of the lock facing down.

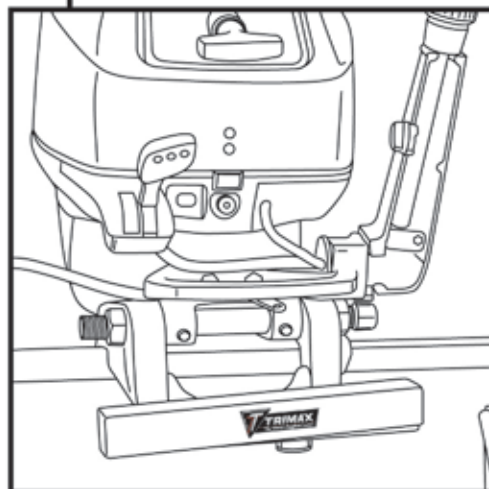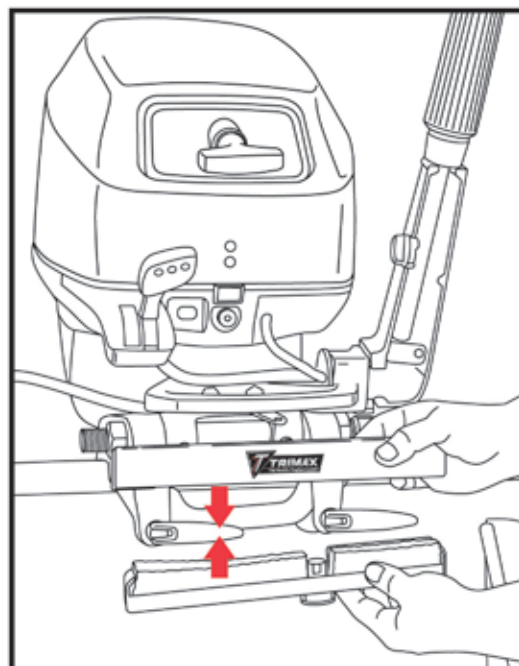

**NOTE:** BE SURE TO RECORD YOUR KEY NUMBER FOR REPLACEMENT IF LOST

■ Constructed of Heavy Gauge Steel For Maximum Security.

■ Foam Padding Reduces Rattles & Vibration.



■ Includes 2 **TRIMAX™** Flat Keys.

■ Key Hole Cover Helps Keep Out Dirt & Grime.