

TBL610 Instructions

MODEL #
TBL610





OUTBOARD MOTOR LOCK

**Quickly
Secures
Outboard
Motor Clamps
For Added
Security**

■ **Simple To Install**

1. Twist clamps as close to horizontal as possible. Position top half of lock on top of the motor clamps.
2. Push bottom half of lock up to secure. Squeeze top and bottom together for a secure fit.

NOTE: Always place the Keyed half of the lock facing down.

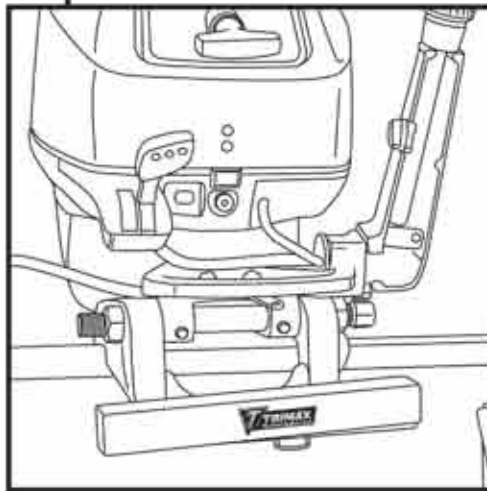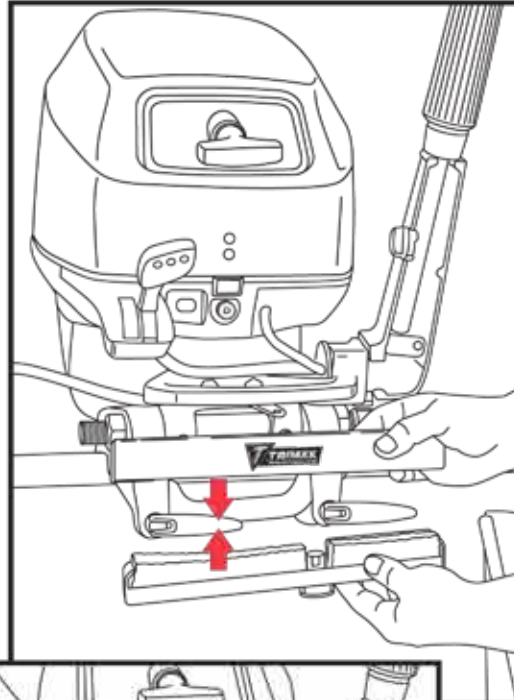

NOTE: BE SURE TO RECORD YOUR KEY NUMBER FOR REPLACEMENT IF LOST

■ **Constructed of Heavy Gauge Steel For Maximum Security.**

■ **Foam Padding Reduces Rattles & Vibration.**



■ **Includes 2 TRIMAX™ Flat Keys.**

■ **Key Hole Cover Helps Keep Out Dirt & Grime.**

TRIMAX™ IS A DIVISION OF:



P.O. Box 4161 • Englewood, CO 80155-4161

See our complete line: www.trimaxlocks.com

Manufactured to exclusive **TRIMAX™** specifications in China.

©2007 Wyers Products Group, Inc.



7 97824 10146 3